

A Gardner Denver Product

# BRONZE CLOSE COUPLED RUBBER IMPELLER PUMP

PIPE SIZE 3/4"



# **FEATURES**

N305M-08F50

- · Bronze construction Corrosion resistant
- Buna Mechanical seal
- Portable
- Slotted motor base
- Neoprene Impeller STD (Buna optional N305M-02)
- Stainless Steel Shaft
- Buna O-ring seal between body and cover eliminates gasket problems
- · Impeller easily replaced
- Available with AC or DC motors

#### **IMPORTANT**

Performance is based on full voltage supply. Use direct lines. Do not drain voltage with other electrical equipment on same circuit. Lower voltage reduces performance and overloads motor. Use adequate wires size and length to maintain supply voltage.

## MOUNTING

Pump will operate satisfactorily when mounted in any position.

## **DO NOT RUN DRY**

Rubber impellers generate high rubbing friction unless lubricated by liquid pumped. Lack of liquid will cause impeller to burn up.

#### **DRIVE & ROTATION**

The pump is driven directly from the electric motor shaft. An aluminum adapter connects the pump to the motor. Reversing supply leads to motor terminals reverses motor rotation. "In" and "Out" pump ports are also reversed. See diagram on reverse side.

Water 70 <sup>0</sup> F (neoprene i	impeller)		Feet Hd	10	20	40	60	80
Model	Voltage	HP	4.3	8.7	17.3	26.0	34.6	
N305M C81 12 VD0		1/4	Flow (GPM)	7.1	6.7			
DEDEODM			Speed (RPM)	1050	1040			
PERFORM	ANCE	ABLE	Current (AMPS)	8.4	9.2			
N305M C82	24 VDC	1/4	Flow (GPM)	15.3	14.5	11.9	6.4	2.0
			Speed (RPM)	2200	2190	2160	2140	2120
8295			Current (AMPS)	9.5	10.3	12.4	14.8	17.1
N305M-08 C84	12 VDC	1/4	Flow (GPM)	13.8	13.0	9.7		
			Speed (RPM)	1950	1930	1880		
2924			Current (AMPS)	16.0	17.8	21.9		
N305M-08 F93	24 VDC	1/3	Flow (GPM)	13.8	12.9	9.6	4.7	
			Speed (RPM)	1920	1920	1910	1860	
3073			Current (AMPS)	8.3	9.3	11.1	13.9	
N305M-08 F50	115/230	1/3	Flow (GPM)	12.9	12.1	8.9	4.2	
8458	VAC TEFC		Speed (RPM)	1780	1780	1780	1770	
N305M-08 F97	230/460	1/3	Flow (GPM)	12.9	12.1	8.9	4.2	
8456	VAC TEFC		Speed (RPM)	1780	1780	1780	1770	

Notes: Maximum recommended operating point

# LIQUIDS AND TEMPERATURE

Liquids compatible with neoprene can be pumped including fresh and salt water solutions and mild chemicals. Do not pump severe solvents or acids. When possible flush pump with fresh water after each use.

Extremes of cold and heat will affect impeller life. Limits of 40<sup>0</sup> to 140<sup>0</sup>F should be observed. Do not allow liquid in pump to freeze. Drain pump by loosening cover screws. Use methyl alcohol based anti-freeze compounds such as Zerex, Shell Zone, Pyro Permagard, Dowgard.

## **SUCTION LIFT**

Suction lift of 15 ft. is possible when impeller is wet. Suction lines must be air tight in order for pump to self prime. a foot valve at beginning of suction line is recommended.

## **IMPELLER REPLACEMENT**

The impeller must be replaced if it is worn out or has been damaged by debris or by running the pump dry. Symptoms of a defective impeller are low pumping pressure and low flow

To replace the impeller remove screws and cover. Pull out the impeller with nose pliers or two screwdrivers. Be careful not to dent the pumping chamber with these tools. When inserting new impeller, line up key slot in impeller with the key in the shaft. Use oil on shaft and avoid forcing the impeller onto the shaft.

The impeller should also be removed for storage periods to prevent the blades from taking a permanent set.

#### SEAL REPLACEMENT

If water drips from the weep hole or from the area where the shaft exits the pump, the seal is defective and must be replaced. Prolonged running of the pump with a leaky seal can destroy the motor bearings resulting in catastrophic pump failure.


For seal replacement, the pump must be removed from the motor and disassembled in order to gain access to the seal area. Where mechanical seals are used, both components (stationary and rotating member) must be replaced at the same time.

Refer to exploded view drawings for seal location and part numbers for ordering purposes.






BRONZE CLOSE COUPLED RUBBER IMPELLER PUMP

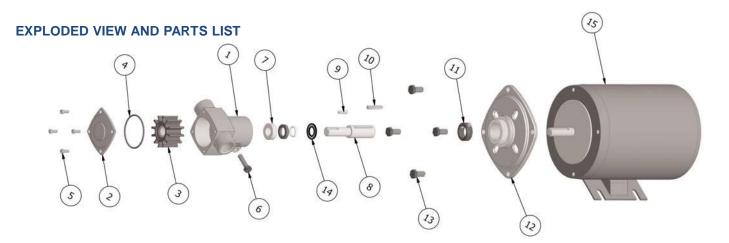


	Configuration Impeller Material / Motor HP / Voltage	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
		Body	Cover	Impeller	O-Ring	Screw	Screw	Seal	Shaft	Key	Key	Collar	Adapter	Screw	Washer	Motor	Repair Kit
Pump No.		Qty. 1	Qty. 1	Qty. 1	Qty. 1	Qty. 4	Qty. 1	Qty. 4	Qty. 1	Qty. 1							
N305M	Neoprene			6620	8231	5504	5595	32230	8319	6739	6845	7991	7990	5916	6631	N/A	
N305M-C81	Neoprene / 1/4 HP / 12VDC															8295	10704
N305M-C82	Neoprene / 1/4 HP / 24VDC															8295	
N305M-02	Buna		6736	8647												N/A	12187
N305M-08C74	Neoprene / 1/4 HP / 12VDC	8318-1	6736										7459	5411		2924	10704
N305M-08F93	Neoprene / 1/4 HP / 24VDC			6620												3073	
N305M-08F50	Neoprene / 1/3 HP / 120VAC			6620												8458	
N305M-08F97	Neoprene / 1/3 HP / 460VAC															8456	

= Items that are included in repair kit.


## DIMENSIONS

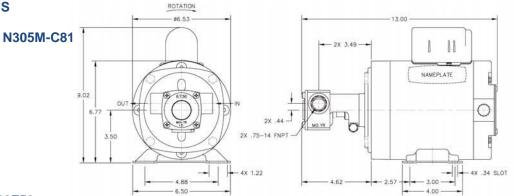

#### N305M-08F50

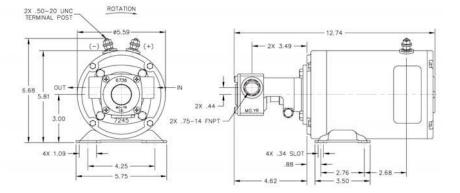

#### **STANDARD ROTATION**

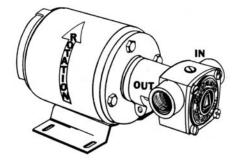

Specifications are subject to change without notice.